



Quick User Guide

Revoria Press E1136 / E1125 / E1110 / E1100



Features Content

Thank you for selecting **Revoria Press E1136 / E1125 / E1110 / E1100**.

This quick user guide provides the fundamental Copy / Scan / Print operating procedures for ease use of the machine.

Quick User Guide Organization

Features Content Describes the content of this guide and overview of the machine.	Page 1 - 2
Copy Describes the copy features and operations.	Page 3 - 18
Scan Describes the scan features and operations.	Page 19 - 24
Print Describes the print features and operations from computer.	Page 25 - 32
Describes procedures to replace consumables (Toners/Drum/Waste Bottle/Staples)	Page 33 - 34
Paper Jams Describes procedures to clear paper jams when error message displays.	Page 35 - 37
Troubleshooting Online support Assistance - describes measures to acquire online help solutions and / or submit a Service & Support Request.	Page 38 - 44

IMPORTANT:


The screen images in this guide solely used for illustration and are based on the standard machine configurations. Some features mentioned may not be used depending on the machine configurations. Unsupported features will not be displayed on the screen. Abnormal features will be grayed out on the screen.

This Quick User Guide may not be copied or modified without the written consent of the publisher. Parts of this user guide are subject to change without prior notice. We welcome any comments on ambiguities, errors, omissions or missing pages.

Contact FUJIFILM Customer Training Department for more information.

Overview

Powering On / Off the machine

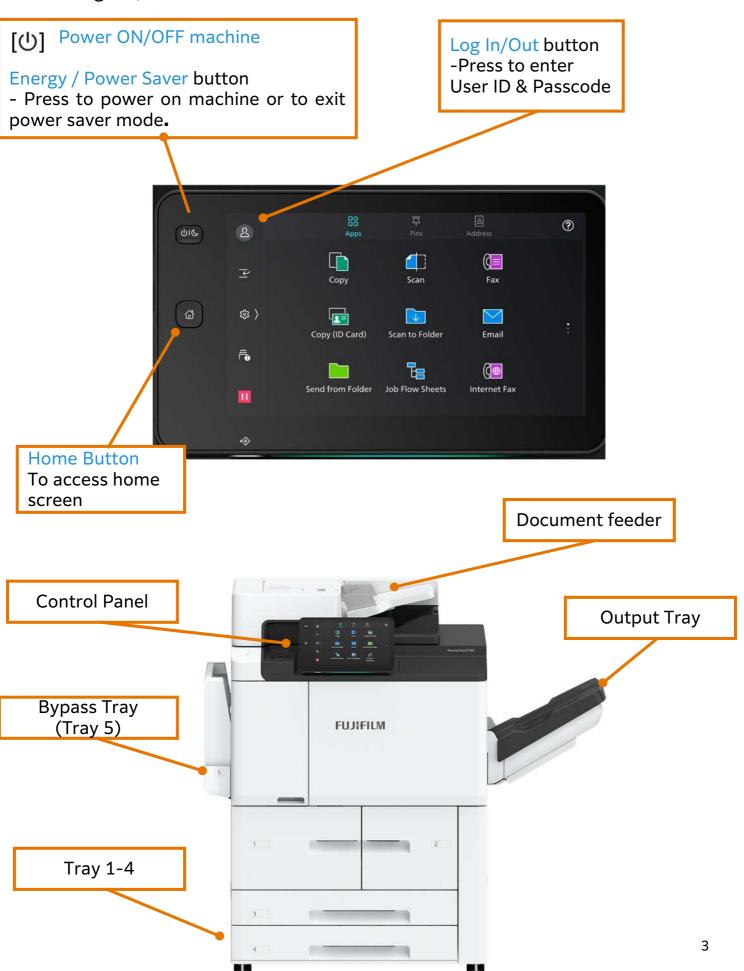


COPY FEATURES

Reduce/Enlarge

Page 05


To make a reduced or an enlarge output size.

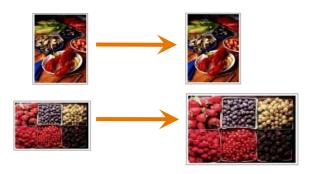

2-Sided Copying

Page 06

To make copies single or double sided output.

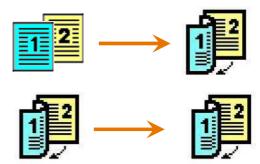

Book Copying

Page 07


To copy bound documents using platen glass on to 2 separate sheets



Mixed Sized Originals

Page 08

 To scan different size documents simultaneously and copies onto matching paper size.



Pages per side

paper

Page 09


Finishing

Page 10


[Uncollated]

1,1...2,2...3,3...

To make copies collated (stapled & punched)

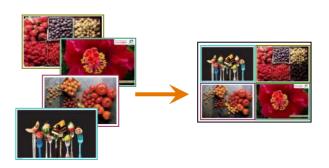

To copy multiple documents onto a single sheet of

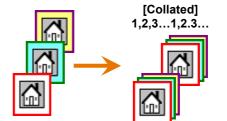

Edge Erase / Image Shift

Page 11


To erase unwanted marks along the edges / To shift image copy position $% \left(1\right) =\left(1\right) \left(1\right) +\left(1\right) \left(1\right) \left(1\right) +\left(1\right) \left(1\right) \left$



Booklet Creation

Page 12

To copy multiple sheets of documents in page order to make a booklet

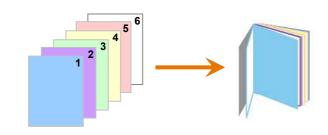

COPY FEATURES

Repeat Image

Page 13


Image to be print repeatedly on one sheet of paper



Folding

Page 15

To make copies output as folded by half or in three.

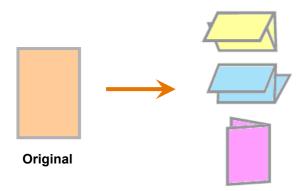

Form Overlay

Page 17


To make copies overlaying the first page of the document and the rest of the documents.



Annotations

Page 14


To insert stamp, date, and page number to printed copies.

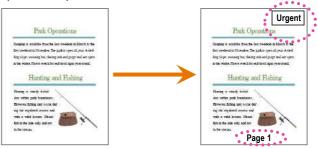

Build Job + Sample Set

Page 16


To make copies with different settings individually for each document page or stack as one job.

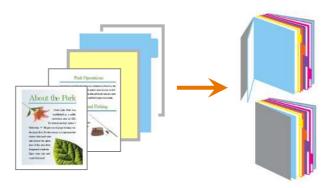

ID Card Copying


Page 18

 To copy both sides of ID card onto one side of paper




COPY FEATURE: REDUCE/ENLARGE




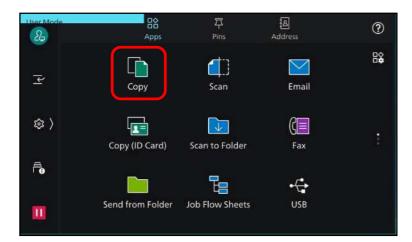

1. From the home screen, Select [Copy]

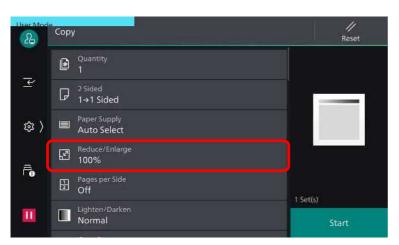



2. Scroll down to [Reduce/Enlarge] feature

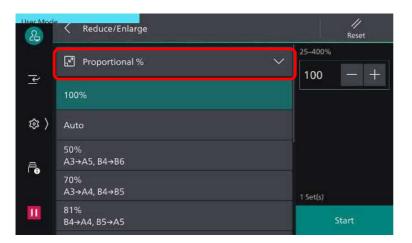


3. Tap on [Proportional %] for more options. Alternatively, select and adjust your preference for the %

COPY FEATURE: 2-SIDED COPYING

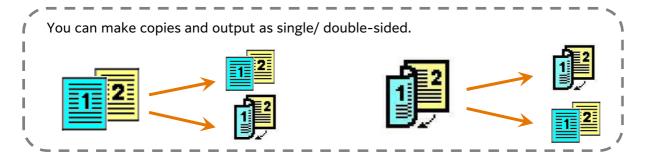


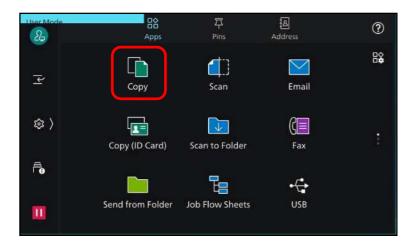

1. From the home screen, select [Copy]

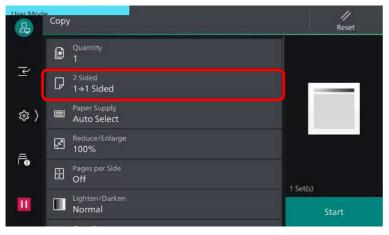

2. Select [2-Sided Copying]

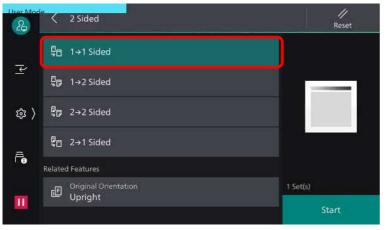

- 3. Select an option:
 - 1 → 1 Sided copy 1-sided document onto 1 side of paper
 - 1 → 2 Sided copy 1-sided document onto 2 sides of paper
 - 2 → 2 Sided copy 2-sided document onto 2 sides of paper
 - 2 → 1 Sided copy 2-sided document on 1 side of the paper

Press <Start> button

Note


Head to Head – both sides of the paper are at the same orientation.

Head to Toe – one side of the paper are at rotated orientation

COPY FEATURE: BOOK COPYING

You can make copies from bound document into separate sheets of paper using platen glass.




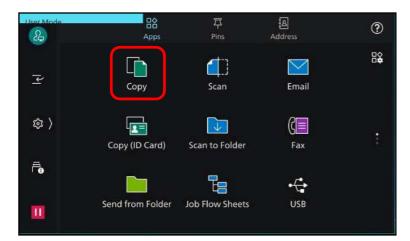

1. From the home screen, select [Copy]




2. Scroll down and Select [Book Copying]

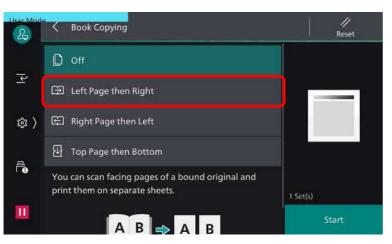

3. Select an Option (refers to book reading sequence) Left Page then Right Right Page then Left Top Page then Bottom Select an option: Both Pages Left Page Only Right Page Only

Press <Start> button

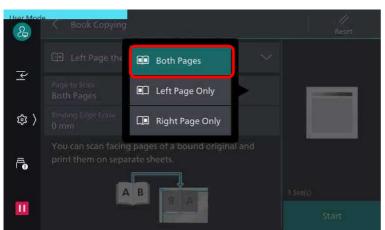



Note

Both Pages – to copy both pages of the book Left Page Only/Right Only – copy selected


side of the book

COPY FEATURE: MIXED SIZE ORIGINAL

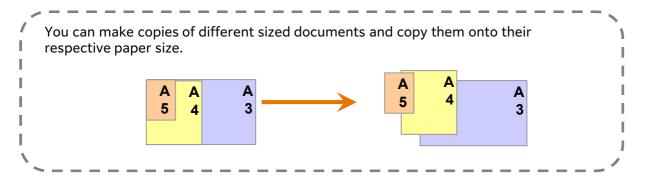


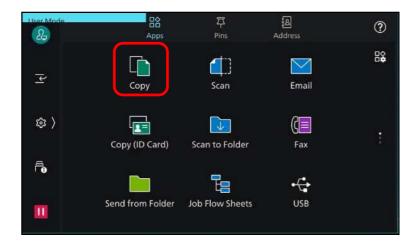

1. From the home screen, select [Copy]

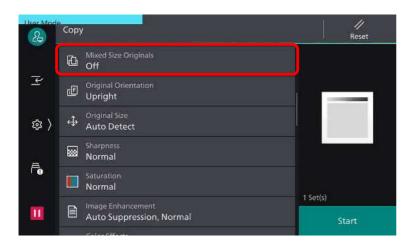


2. Scroll down and select [Mixed Sized Originals]

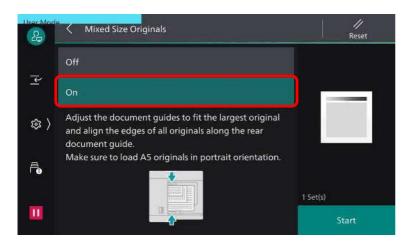


3. Select option: ON

COPY FEATURE: PAGES PER SIDE

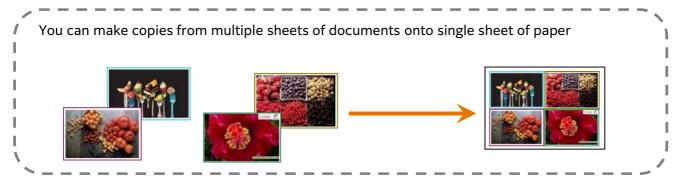

1. From the home screen page, select [copy]

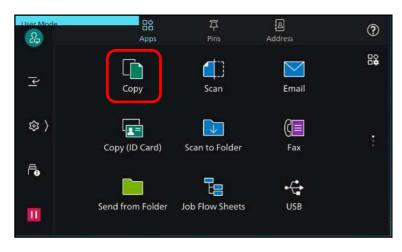

Copy

Pages per Side
Off

Lighten/Darken
Normal


Copy Output
Auto
Output Dest. / Offset Stacking
Lower Center Output Tray, System Default

Original Type
Photo & Text / Printed Original

Mixed Size Originals
Off

Start


2. Select [Pages per Side]

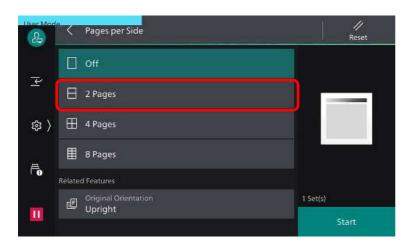


3. Choose between

Off – feature not applied 2 Pages Up – 2 documents copied into 1 sheet of paper 4 Pages Up – 4 documents copied into 1 sheet of paper 8 Pages Up – 8 documents copied into 1 sheet of paper Set preferred Reading Order & Press [Save]

COPY FEATURE: STAPLE/PUNCH HOLE

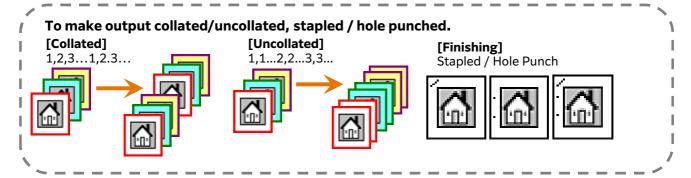


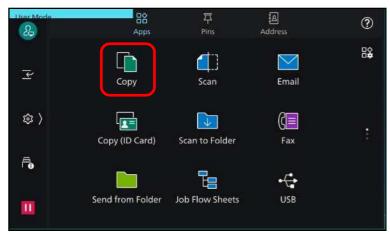

1. From the home screen, select [copy]




2. Select [Stapler]/[Holes]

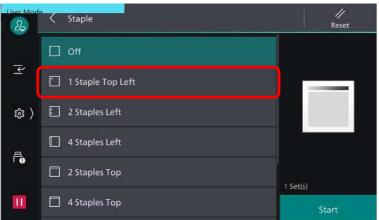

3. Select option:
 Staple position
 Hole Punch position
*both function can be selected simultaneously.


press <Start> button

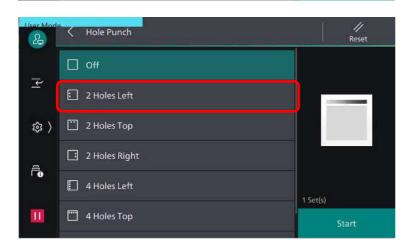


Note


Collated - arranged in page order per sets. Uncollated- arranged in total copies and sort sheets by page


COPY FEATURE: STAPLE/PUNCH HOLE

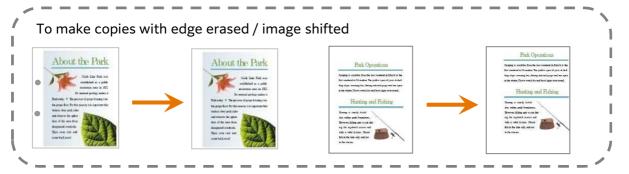

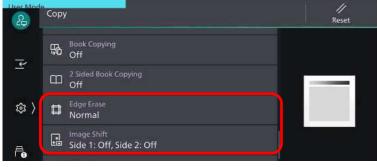


 1. From the home screen, Select [Copy]




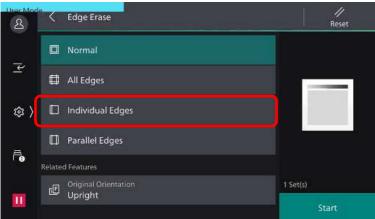

- 3. Select an option:
- All Edge : to erase all edge.
- Individual edge: specify which edge to be erased.
- Parallel Edge: Top + Bottom edge, Left + Right edge.

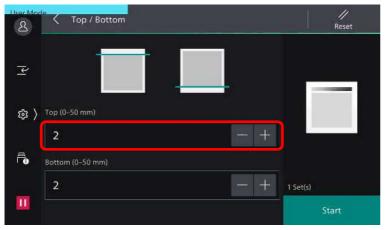



4. Set area to be erased, with the maximum margin is up to $50\,\mbox{mm}.$

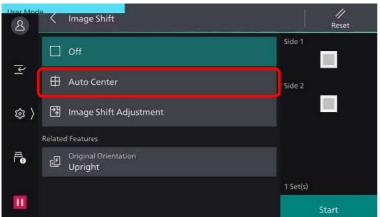


5. [Image Shift] select an option [Auto Center] to automatically adjust to center or set margin to be shifted using [Image Shift Adjustment].

COPY FEATURE: BOOKLET COPYING

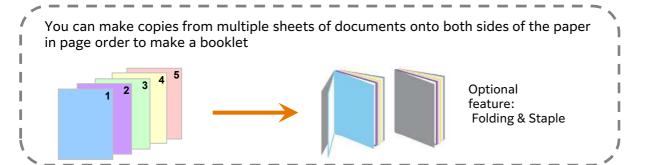


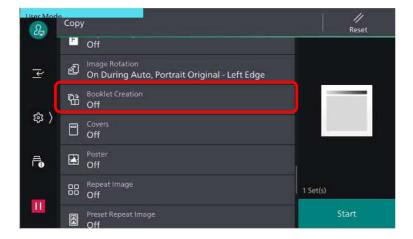

- 1. From the home screen, Select [Copy]
- 2. Scroll down and Select [Booklet Creation]

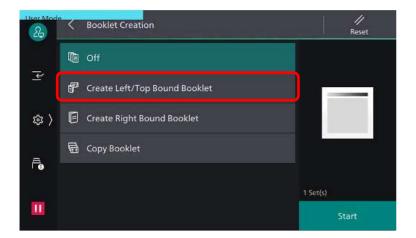

- 3. Select an option:
 - Off feature not applied Create Left/Top Bound Booklet Create Right Bound Booklet Copy Booklet
 - Optional feature: Fold & Staple... Press [Save]

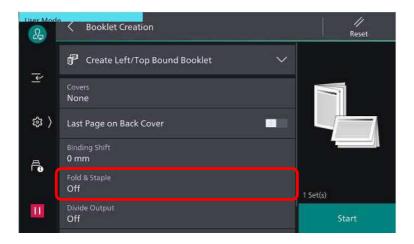


- 4. Select [<] button then select [Paper Supply] choose the Tray with Landscape Orientation
 - Press <Start> button.


COPY FEATURE: REPEAT IMAGE

Make copy of a document / image onto 1 sheet of paper with repeated images.




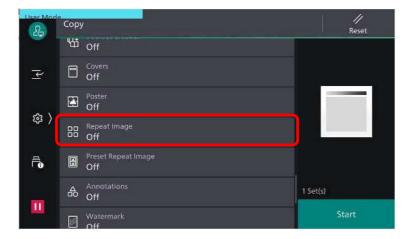

- 1. From home screen, select [copy]
- 2. Scroll down and select [Repeat Image]

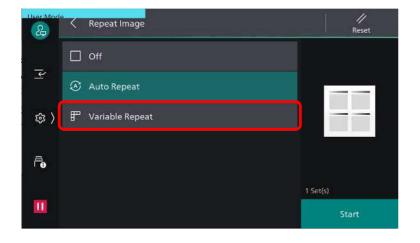



- 3. Select an option:
 Off feature not applied
 Auto Repeat
 Variable Repeat
 - Press [<]
- 4. Scroll up and Select [Original Size]

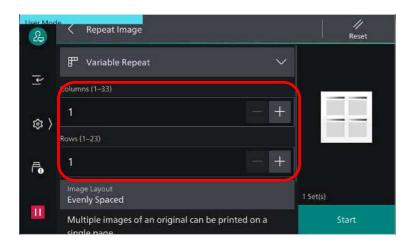


- 5. Set document size. Enter width (X) and height (Y) value. Press [Save].
 - Press <Start> button

COPY FEATURE: ANNOTATION

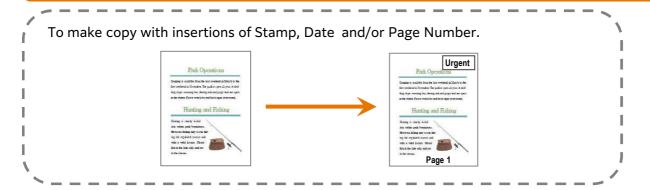


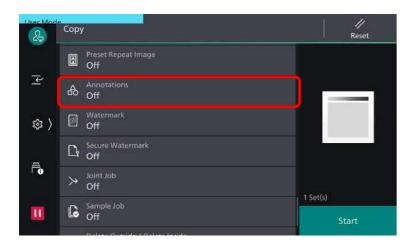

- 1. From home screen, select [copy]
- 2. Select Annotation

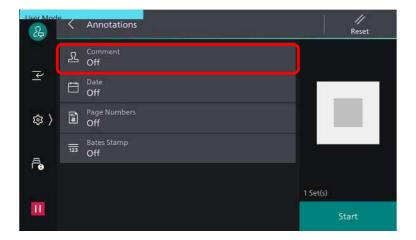


3. Select an option: Comment Date Page Numbers

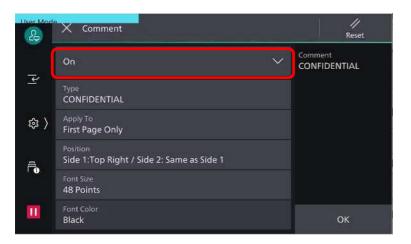

Press [On] to enable any annotation.

COPY FEATURE: FOLDING FINISHER

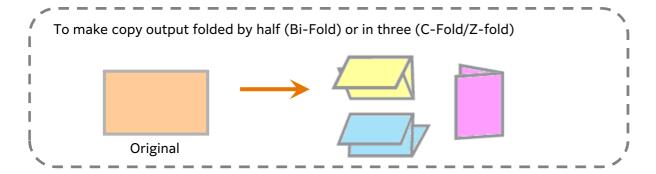

- Copy

 Copy

 Reset

 Off

 Lighten/Darken
 Normal

 Staple
 Off

 Off


 Folding
 Off

 Copy Output
 Auto


 1 Set(s)

 Start


 Start
- 1. From the home screen, Select [Copy]
- 2. Select Folding

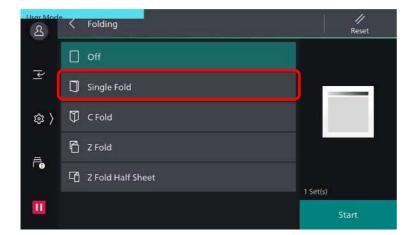


- 3. Select an option:
 - Z Fold*
 - C Fold*
 - Single Fold (Print Image Inside / Outside Fold) Select [Save]
 - *depends on the type of finisher
- 4. Select [<] Choose A4 Paper (Landscape)

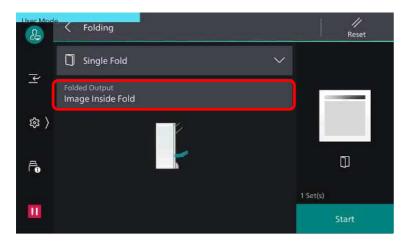


COPY FEATURE: JOINT JOB

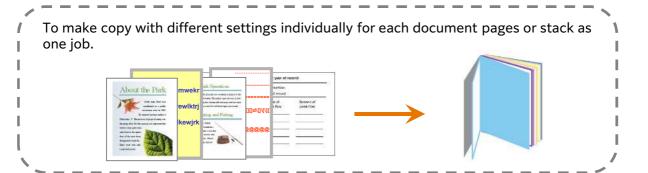


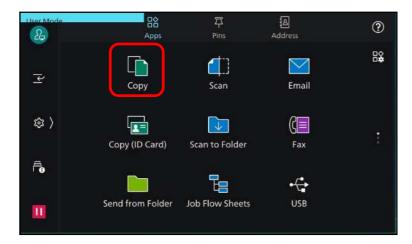

1. From the main home screen, select [Copy]

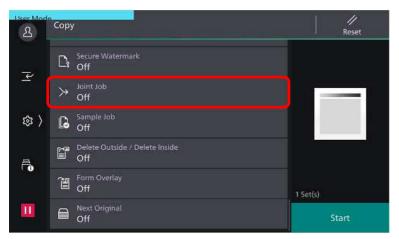



- 2. Select [Joint Job]>[Select ON]
- 3. Select [<] > Choose required feature if necessary
 - Load 1st stack/job to be scanned Press <Start>

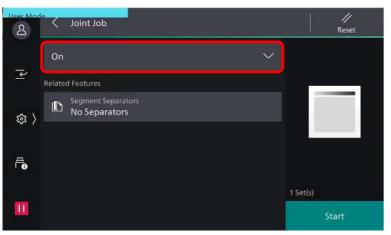


- 4. Select [Change Settings] Select required feature for $2^{\rm nd}$ job if necessary
 - Load second stack/job to be scanned. Press <Start>
- 5. Repeat Step 4 to continue. Select Sample Set / Change Quantity if necessary
 - Press Last Original button to end job. Documents will then be printed.

COPY FEATURE: FORM OVERLAY

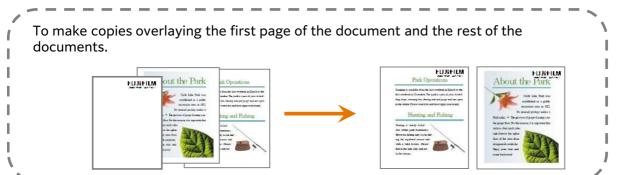


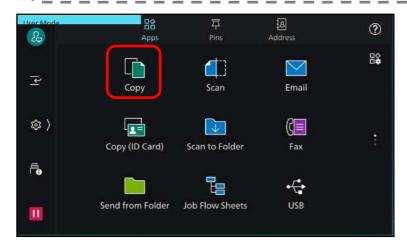

1 From the home screen, Select [Copy]

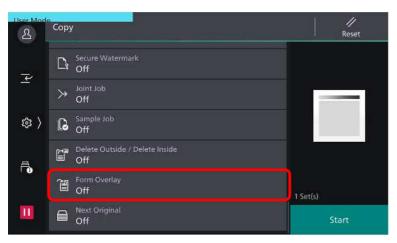


2 Select [Form Overlay]>

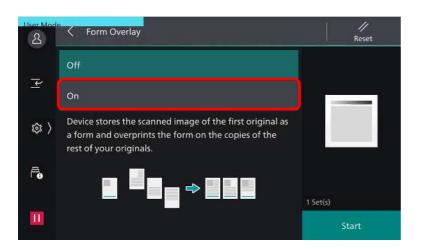


3. Select ON. Follow instruction to arrange document overlay

COPY FEATURE: COPY (ID CARD)

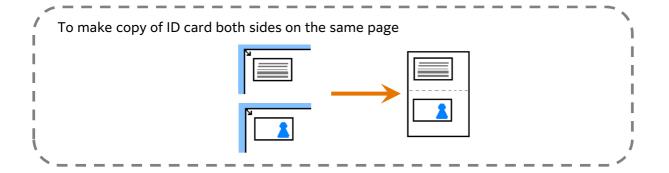



- Load ID Card on the platen glass (within A5 scan area) Close document cover.
- 2. From the home screen, Select [Copy(ID Card)]

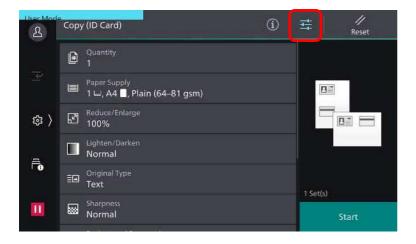

3. Select [] to change:
Quantity
Paper Supply
Original Type
Lighten/Darken




 Open document cover and flip to the 2nd side of ID card. Place it on the same place.

SCAN FEATURES

Store to Folder

Page 21

To scan documents and save the scanned data to a folder located at the machine.

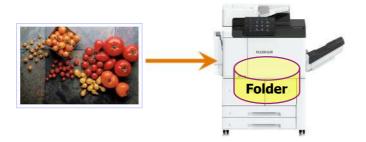

Scan to Email

Page 22

To scan documents and send the scanned data as an e-mail attachment



Scan to PC

Page 24

To scan documents and send the data to a computer on the network.



Output Format *

Page 23

Document can be scanned to the supported format. [JPEG, TIFF, PDF, DW]



Output Color/Resolution

Page 23

Set scanning color & output resolution for the documents (up to 600dpi).



Book Scanning

Page 25

The feature scans a bounded documents onto separate sheets of paper using platen glass.



File Name

Page 23


The default file name is "img-xxx-yyy.zzz" (where xxx is the date and time, yyy is the page number, and zzz is the extension).




SCAN FEATURES: STORE TO FOLDER

You can scan and save the scanned data to a pre-registered folder and import to the computer using Store File Manager application.



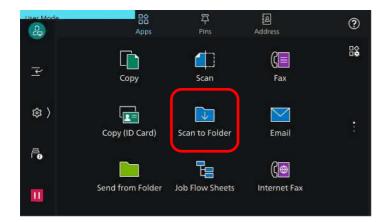


1. Select [Store to Folder]

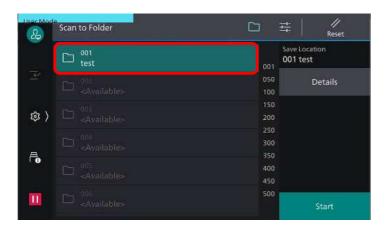

2. Select required Folder.

* Enter password if any

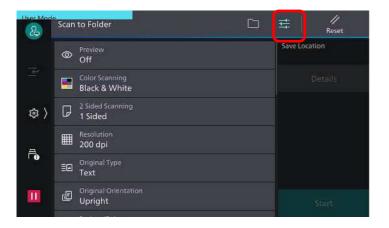

- 3. 3. Select an option:
 - a: [Color Scanning] Auto Detect / Color Black & White / Grayscale
 - b: [2 Sided Scanning]
 - 1 Sided scan single sided
 - 2 Sided (Head to Head)
 - 2 Sided (Head to Toe)
 - c:[Resolution]
 - 200/300/400/600 dpi.
 - d:[File Name] rename the document.


Press the <Start> button.

Documents are scanned and stored at the selected folder.


SCAN FEATURES: SCAN TO EMAIL

You can scan & send the scanned data to selected recipients as e-mail attachment(s).




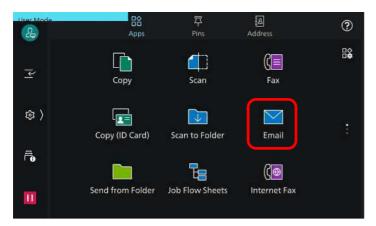


1. Select [Email]

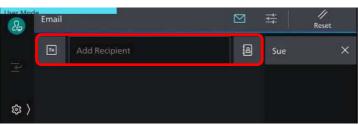

2. [Address Book] or select [New Recipient] to enter email address(s)

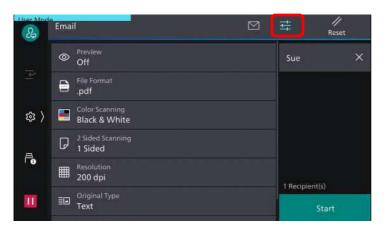


- 3. Select an option:
 - a: [Color Scanning] Auto Detect / Color Black & White / Grayscale
 - b: [2 Sided Scanning] 1 Sided scan single sided 2 Sided (Head to Head) 2 Sided (Head to Toe)
 - c: [File Format] TIFF / JPEG / PDF / DOCUWORKS / More...
 - d:[Resolution] 200/300/400/600 dpi.
 - e:[File Name] rename the document.

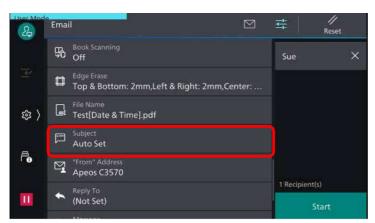


4. Select [Subject] to enter the email subject.

SCAN FEATURES: SCAN TO PC




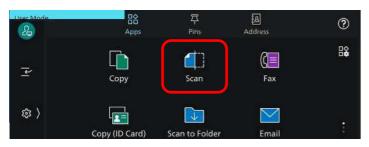

1. Select [Scan]

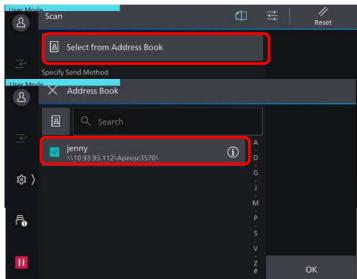

Select [Address Book]select recipient in the address book

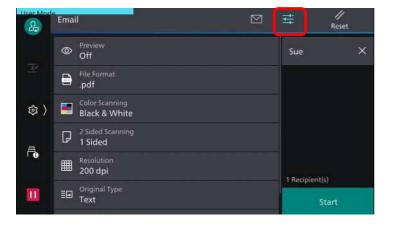


- 3. Select an option:
 - a: [Color Scanning] Auto Detect / Color Black & White / Grayscale
 - b: [2 Sided Scanning] 1 Sided scan single sided
 - 2 Sided (Head to Head) 2 Sided (Head to Toe)
 - c: [File Format] TIFF / JPEG / PDF / DOCUWORKS / More...
 - d:[Resolution] 200/300/400/600 dpi.
 - e:[File Name] rename the document.


SCAN FEATURES: BOOK SCANNING

Book Scanning allows you to scan a book onto separate sheets of paper in page order and transfer via any scanning method [Folder/Email/PC]




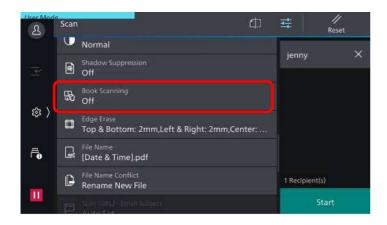

- Place book on the Platen Glass face down and Select preferred scan method e.g. Scan to PC
- 2. Select an option:
 a: [Color Scanning]
 Auto Detect / Color
 Black & White / Grayscale
 b: [File Format]
 TIFF / JPEG / PDF /
 DOCUWORKS / More...

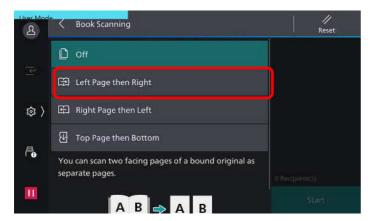

3. Select an option:
[Book Scanning]
Left Page then Right
Right Page then Left
Top Page then Bottom
[Original Size]
Enter width (X) and height
(Y) value for an open book.

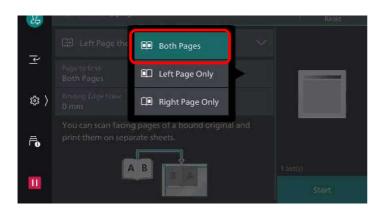

4. Choose between:

[Both pages]
[Left page only]
[Right page only]

PRINTING FEATURES

Printing Job Types

Page 27

Normal Print - prints as normal print

Secure Print - stores print jobs on the machine and prints when User D & password entered

Sample Set - print a trial copy

Delayed Print - Temporarily stores print jobs on the machine to print it at specified time.

Store in Remote Folder – stores print job at registered folder and print when required.

Secure Print

Page 28

Temporarily stores print jobs on the machine and prints when User ID & password entered.



2-Sided Printing

Page 29

You can send file and prints on both sides of paper.



Booklet Printing

Page 30

To print multi-page file into a booklet format and double sided.



Pages Per Sheet Printing

[from 2 Up and up to 32 Up]

Page 31

Watermarks



Page 33

To print files with a pre-fixed text such as 'Urgent' or 'Confidential' over the printout.



To print multi-page files onto single sheet of paper



Folding

Page 32

To print out files folded by half or in three



Paper Tray Selection

Page 27

To specify paper tray for printing. Optional: Finishing Stapled / Hole Punched.


Default Paper Tray - Auto Tray Select

If Tray 5 [Bypass] is selected, paper type can be specified according to paper loaded on Tray 5.

Default Finishing Output - Collated

If Finishing is selected, hole punching and stapling can be applied to the printed copies.

PRINT FEATURE: PAPER TRAY & PAPER TYPE)

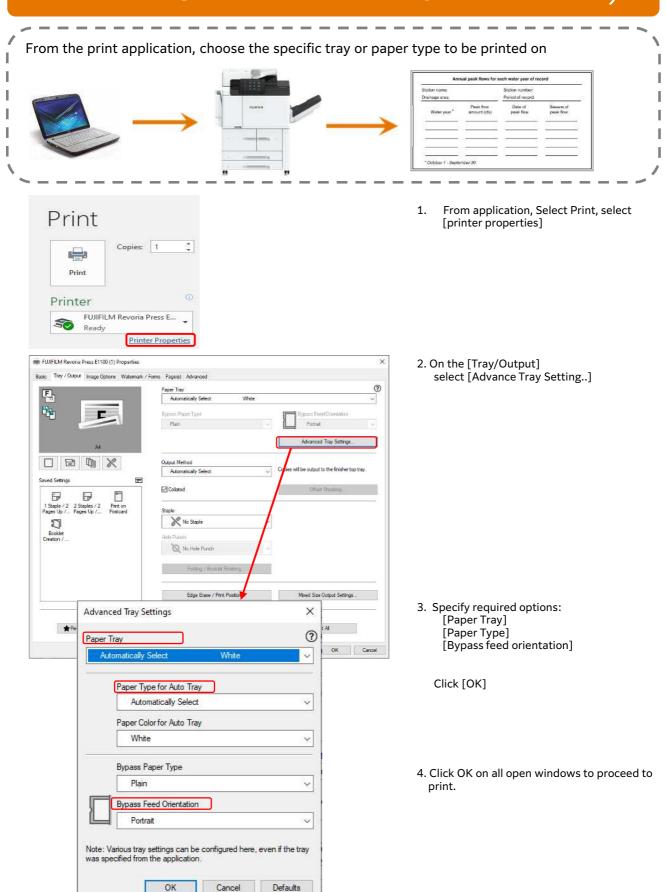


PRINT FEATURES: SECURE PRINT

To set a password to a print job and temporarily stores print memory on the machine and print upon entering password.






1. From application, Select Print, select [printer properties]

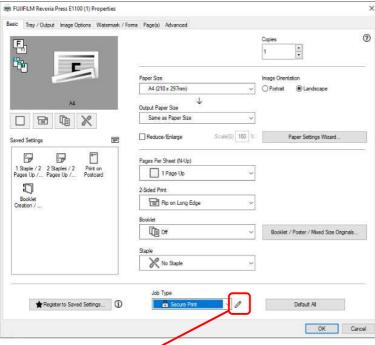

2. On the [Paper/Output] > select [Job Type] : Secure Print

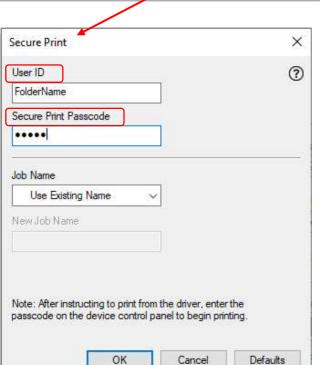

3. Click on Key in your preferred [User ID] [Passcode] *optional

Click OK on all open windows to proceed to print

PRINT FEATURES: 2 SIDED PRINT

Files can be printed into 2 sided format with 2 sided flip on long edge or flip on short edge.





1. From application, Select Print, select [printer properties]



2. On the [Paper/Output] > select [2-Sided Print]2 Sided Print2 Sided Flip on Short Edge

E	Paper Tray			(
<u></u>	Automatically Select	White		×
	Bypass Paper Type		Bypass Feed Orientation	
	Plain	v	Portrait	¥
A4			Advanced Tray Settings	
	Output Method	100		
Saved Settings	Automatically Select		opies will be output to the finisher top tra	w.
	☑ Collated		Offset Sacking.	
1 Staple / 2 2 Staples / 2 Print on				
Pages Up / Postcard	Staple No Staple			
Booklet	No Stable			
Creation /	1 Staple			
	2 Staples			
	Folding / Booklet Finis	hing		
	Edge Erase / Print Por	ition	Mixed Size Output Settings	
	Job Type			
	Normal Print		Default All	


*Finishing Feature

3. Select [Tray/Output] to set Stapling / Hole punch.

Set required stapling and hole punching position.


4. Click OK on all open windows to print.

PRINT FEATURES: BOOKLET PRINTING

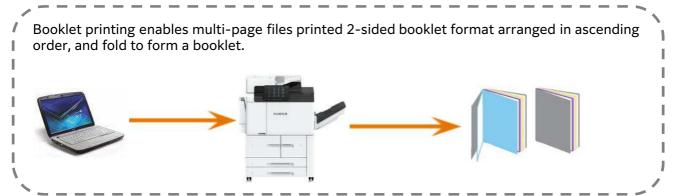




 From application, Select Print, select [printer properties]

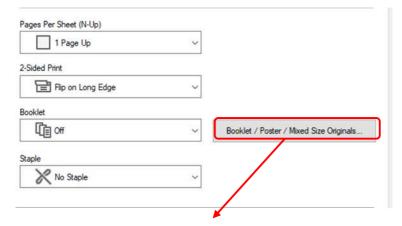

2. Under [basic] tab

Select [Booklet /Poster/ Mixed Size Originals...] > Booklet Creation

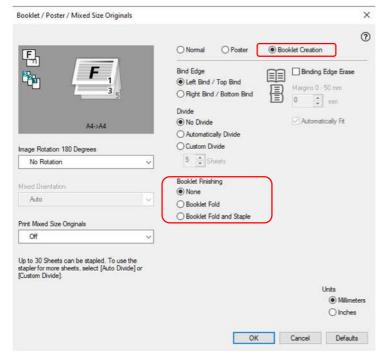


- 3. Select required feature:
 [Booklet Finishing]
 Booklet Fold
 Booklet Fold & Staple
 [Booklet Layout]
 Booklet layout
 [Fit to New Paper Size]
 Booklet output size (A4 or A3 size)
 [Bind Edge]
 Left Bind / Top Bind
 Right Bind / Bottom Bind
- 4. Click OK on all open windows to print.

PRINT FEATURES: PAGES PER SIDE






1. From application, Select Print, select [printer properties]

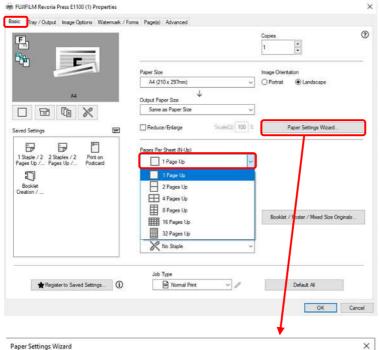

Select
 [Pages Per Sheet (N-Up)]
 Select required output:
 1 Page Up to 32 Pages Up
 Set 'Image Order' if required

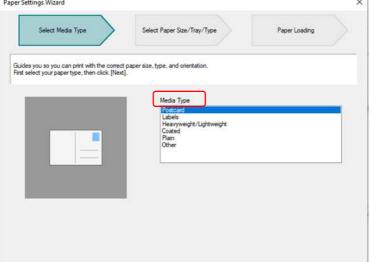

< Back Next > Cancel

3. Select [Paper Setting Wizard] to specify

[Paper Tray]
[Paper Size] (Eg: Original Size & Output Paper Size)
[Paper Type]


4. Select [OK] on all open windows to print.

PRINT FEATURES: FOLDING






 From application, Select Print, select [printer properties]

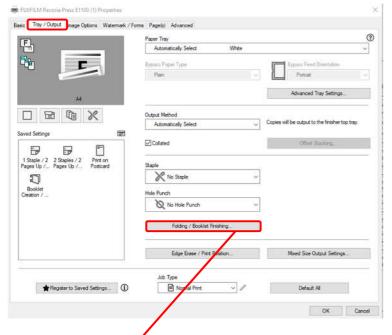


2. Select [Tray/Output] tab > Select Folding/Booklet Printing

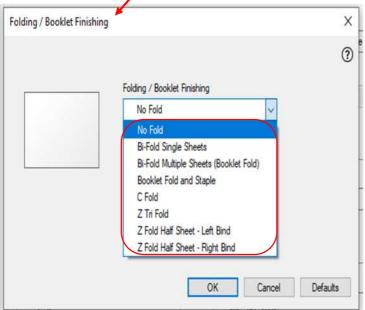

- Select required Fold Options


 [bi-fold single sheets]
 [bi fold multiple sheets]
 [C fold]
 [Z tri fold]
- 4. Select [OK] on all open windows to print.

PRINT FEATURES: WATERMARK

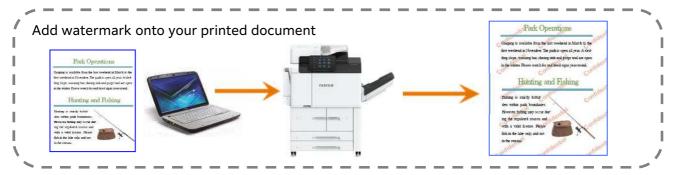




 From application, Select Print, select [printer properties]

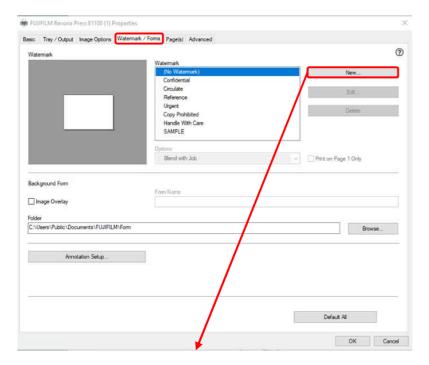

Select
 [Layout/Watermark]
 Select [Watermark]
 Select required option:
 Confidential / Circulate,
 Urgent, etc..

Or Select [New] to create new Watermark

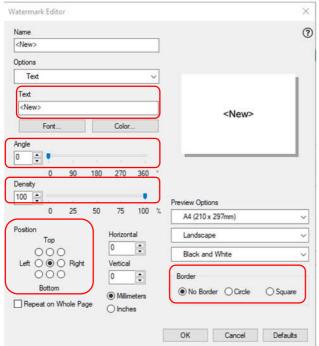

3. Use the Watermark Editor to customize preferred text. You can customize

[Name] [Text] [Angle] [Density] [Position] [Border]

Click [OK] to apply watermark

4. Click OK on all open windows to print.

MAINTENANCE: REPLACING CONSUMABLES

Replacing Toner Container


Note: The machine will prompt a message when it is time to replace a new toner cartridge

Caution: Place a few sheets of paper on the floor before removing the cartridge.


This will allow any excess Toner to fall on the paper.

Replace Toner Cartridges while the machine powered ON.


Powering the machine OFF will erase all information stored in the machine's memory.

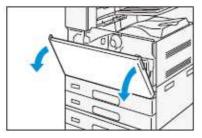

1. Ensure the machine is not operating, before opening the Front Cover.

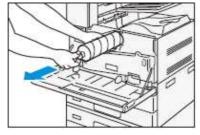

2. Place your hand under the toner cartridge and slowly pull out the toner cartridge. Gently shake the cartridge

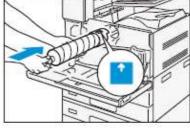

3. Orient the toner cartridge with the arrow facing up and insert the cartridge until it stops. Close the front cover


Replacing Waste Toner Container

Caution: Do not use warm water or cleaning solvents to remove Toner (Dry Ink) from your skin or clothing. This will set the Toner and make it difficult to remove.


If any Toner gets on your skin or clothing, use a brush to remove the Toner, blow it off, or wash it off with cold water and mild soap.

Do not attempt to use a standard shop vacuum or home vacuum to clean Toner spills in or near the machine.


Shop and home vacuums are not equipped with correct filtration and will contaminate your environment.

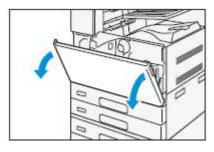

1. Ensure that the machine is not operating, and open the front cover

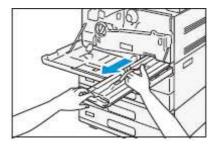

2. Hold the handle of the waste tone container and take out the waste toner container.

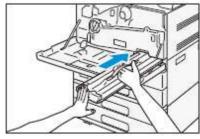


3. Hold the handle of the new waste toner container and slowly push in the waste toner until you hear a 'click' sound. Close the front cover.

MAINTENANCE: REPLACING CONSUMABLES


Replacing Finisher Stapler Cartridge




1: Ensure the machine is idle before opening the Finisher Door.

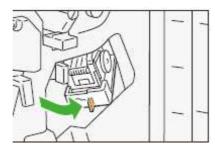


2: Hold [R1] and move the stapler unit to the front

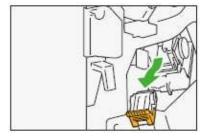


3: Hold the lever and remove the cartridge

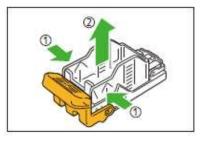

4: Pinch both sides of the empty staple case (1) and remove from the cartridge (2)

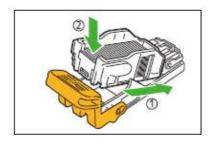


5. Insert a new staple case into the cartridge (1) and push the back side (2)

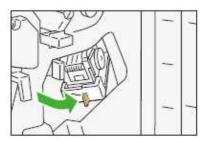


6: Insert the cartridge into the machine. Close the Finisher Front Door.


Replacing R2 & R3 Booklet Staple Cartridges

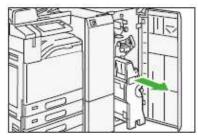


1: Open the Finisher Door, hold and pull out the cartridge lever

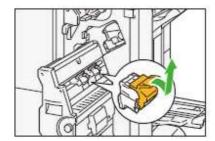


2: Pull out the stapling unit.

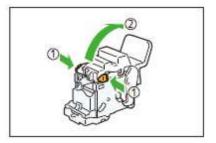

3: Push the orange buttons on either side of the cartridge (1) and open the cover (2). Push the metal part of the cartridge up

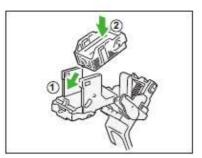

4. Insert a new staple case (1) and push the back side to set in place (2)

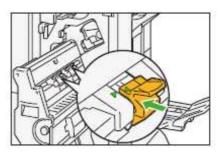


5. Insert the cartridge into the original position, insert the booklet maker all the way. Close the cover.


MAINTENANCE

Clearing Paper Jams


Paper Jams in the Document Feeder (DADF)

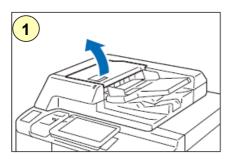


 Ensure the machine is not operating. Pull up the front handle of the top cover and open the cover until it stops

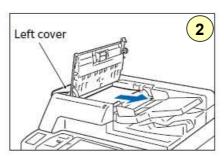


2) Open the left cover until it stops and remove the document

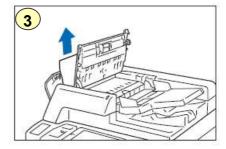

 If the document is caught in the entry, remove the jammed paper from the left cover

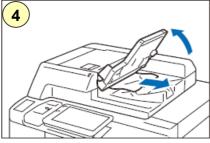


4) If the document is caught in the exit area, lift the document feeder tray and pull the document toward the exit. Put the document feeder back to position and close the left cover

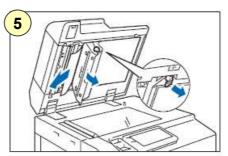



5) Open the document cover, pull down the handle to open the side 2 scanner, and then remove the document. Close the scanner and the document cover


Scanner: Document cover, document glass, film, scanner glass

    Wipe off any dirt with the supplied cloth about once a month. When stains cannot be removed easily, wipe them lightly with the soft cloth slightly moisten with a thin neutral detergent solution











MAINTENANCE


Clearing Paper Jams

Paper Jams in Transfer Module (Front Cover Areas)


WARNING! The machine parts are very hot to touch and remove. Never touch a labeled area indicating 'High Temperature' and 'Caution' to avoid burns.

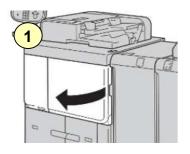


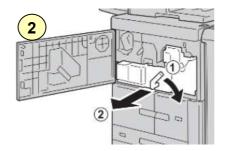


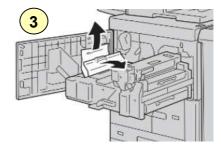

- 1. Ensure machine is idle. Gently open front cover.
- 2. Turn handle 2 to the right until it is in the horizontal position, and then pull out the Transfer Module.
- 3. Lift up lever 2b to remove jammed paper, then turn knob 2a to remove jammed paper.

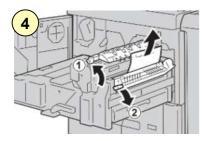

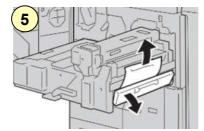

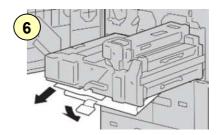


- 4. If paper jammed at top of Transfer Module/ inside Fuser Unit, remove paper by pulling it out toward the left. If the paper cannot be removed, lift the lever 2c and then try removing the paper jam.
- 5. Shift lever 3b on the right of Fuser Unit as necessary and remove jammed paper. If jammed paper remains inside and difficult to remove, pull out Duplex Module after returning the Transfer Module to the original position, and then try again.
- 6. Lower the handle under the Centre of Transfer Module to remove jammed paper. After remove jammed paper, insert Transfer Module, turn the handle 2 to the left and close the Front Cover.

MAINTENANCE

Clearing Paper Jams

Paper Jams in Booklet Maker

WARNING! The machine parts are very hot to touch and remove. Never touch a labeled area indicating 'High Temperature' and 'Caution' to avoid burns.

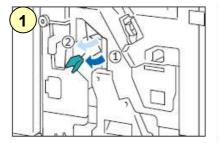






- 1. Ensure machine is idle. Gently open front cover.
- 2. Turn handle 2 to the right until it is in the horizontal position, and then pull out the Transfer Module.
- 3. Open the lever [3a] to the left and remove the jam paper

Paper Jam in Finisher Unit

* Optional Feature

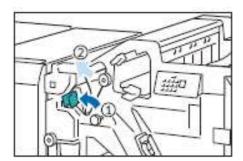


Gently open the finisher door.

Remove any jammed paper at **selected area** displayed on the screen.

If there is any torn paper torn, remove any torn pieces inside the machine.

If the edge of the jammed paper can be reached, pull the jammed paper to remove the jammed paper. Gently close the cover.

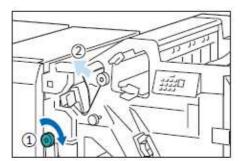

Note

If paper is torn, make sure to remove any torn pieces of paper inside the machine.

To Check Billing Information / Supplies Status

BILLING INFORMATION

On the Home interface select (3) < Device > button.

Select [Billing Information] tab


Total Impressions : Total number of Copy + Print **Copy Service:** Total number of copies made

Print Service: Total number of copies made

Important:

Billing Information is different from the Usage Counters in CWIS properties.

User should submit meter readings based on the meter from machine UI / Touch Screen.

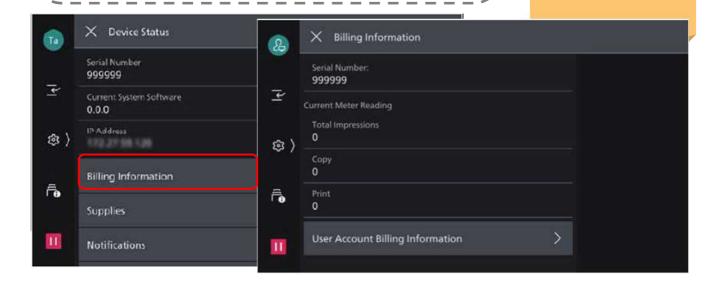

SUPPLIES / CONSUMABLES


Select [Supplies] tab.

The status of consumables is shown as:


"Ready", "Order New", or "Replace Now"

For toner, the amount is shown in percentage (0 to 100%).

Replace only when the alert Message displays "Replace Now"

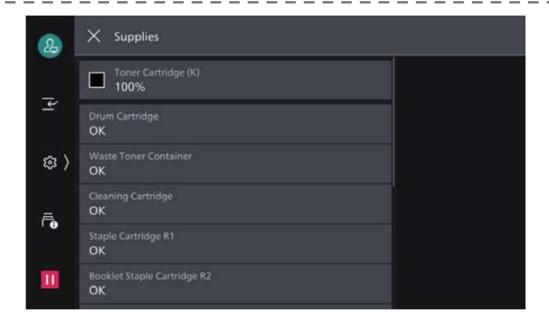


To Set Settings for Bypass Tray

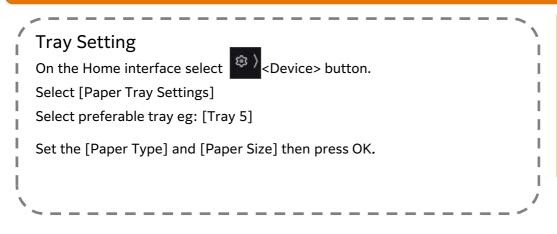

Important:

Tray setting for bypass and additional stacker/tray must be set manually to avoid from paper jam or the quality of your output.

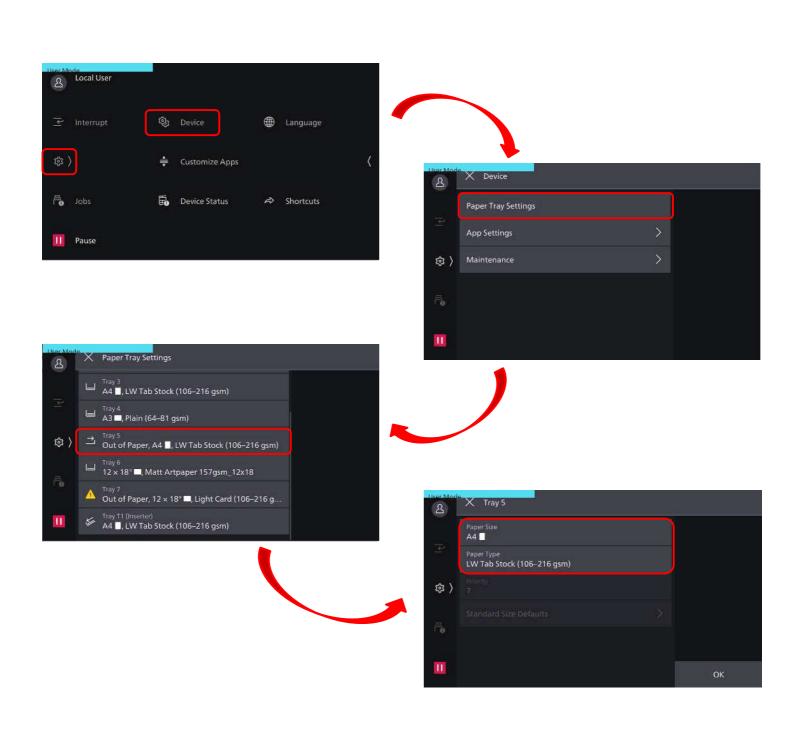

Consumables Part No.



Interface Decurler Module D1

-Real-time paper curl correction

2Inserter D1

-Cover/sheet insertion

❸High Capacity Stacker A1*¹

- 5000-sheet offset-stacking for mass printing
- -Stacker cart

4 Crease/Two-sided Trimmer D2*1

- -Two-sided trim
- -Crease

GFolder Unit CD2

-Z fold half sheet/Tri-fold

Finisher D6

- -100-sheet stapling with auto staple cutting
- -Hole punch*2

Finisher D6 with Booklet Maker

- -100-sheet stapling with auto staple cutting
- -Hole punch*2
- -Saddle staple/Single fold

Square Back Fold Trimmer D1*¹*³

- -Face trim
- -Square back

Simple Catch Tray*4 Offset Catch Tray*4

- *1: Not available on Revoria Press E1100.
- *2: Optional.
- *3: Available only with Finisher D6 with Booklet Maker.
- *4: Available on Revoria Press E1100.


Part Number	Yield
T203035	71,500 prints/ box
WAA1024	250,000 prints/ box
WAA1032	400,000 prints/ box
T351144	1000,000 cycle
CWAA0677	4 Cartridges/ box (5000 staples)
CWAA0856	2 Cartridges/ box (5000 staples)
	T203035 WAA1024 WAA1032 T351144 WAA0677

Yield projections:


Based on continuous printing of A4, one side job with toner density (area coverage) at 6.0%

To Check / Cancel Jobs


To check current, pending and completed jobs or to cancel print jobs.

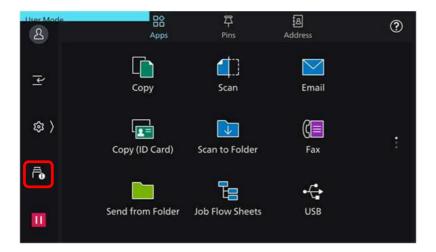


- From Home Service Screen, press on [Jobs] Tab
- The [Jobs] screen displays the current or pending jobs .

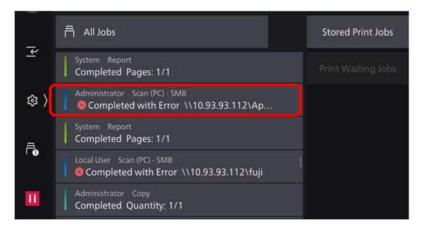

- 3. To view the job status from the listing.a: Completed = Successfulb: Completed with Error =Unsuccessful
- 4. Select the Jobs Log with error for view the Error details

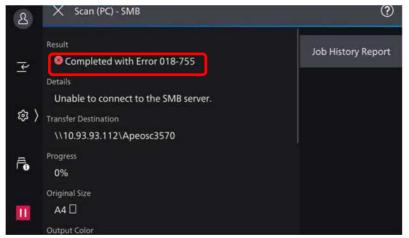

Press [Job History Report] button to print out the report.

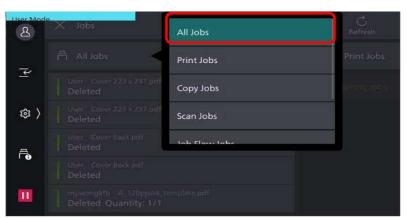


- 6. Press [All Jobs] button to filter the other Jobs options. If any,
 - a: Print Jobs
 - b: Copy Jobs
 - c: Scan Jobs


Select [X] button to exit all screens.

Support & Download (Drivers & Self-help)

Check out FUJIFILM Business Innovation website @ fujifilm.com/fbmy

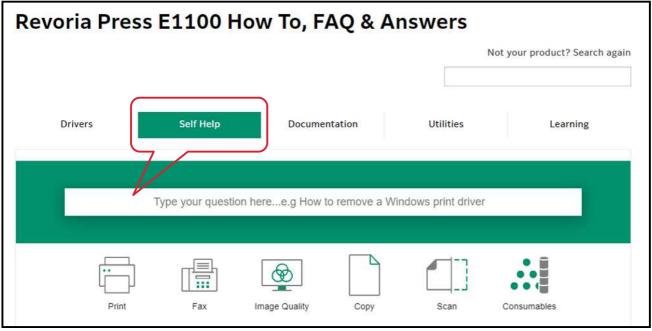



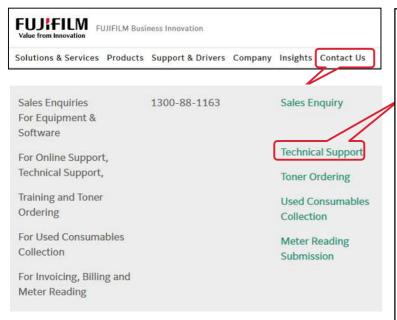







EP-BB Self Registration (subject to configuration)

For Green Report, kindly Self-Register your account 30 days after activation date. Please follow the steps below to register.


Open a web browser and key in the below address https://service-fb.fujifilm.com/direct_app/

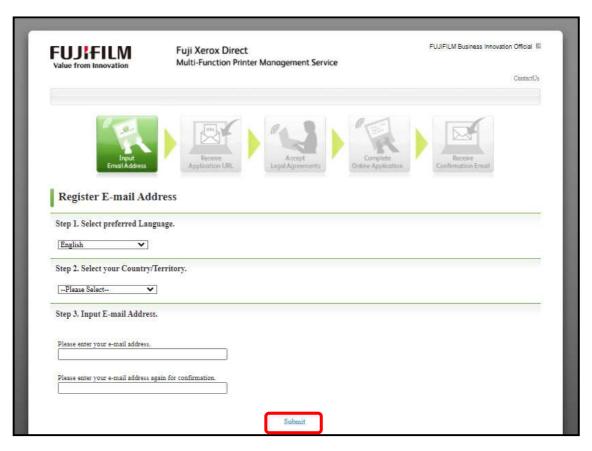


An e-mail notification with the personalized URL will be sent via e-mail

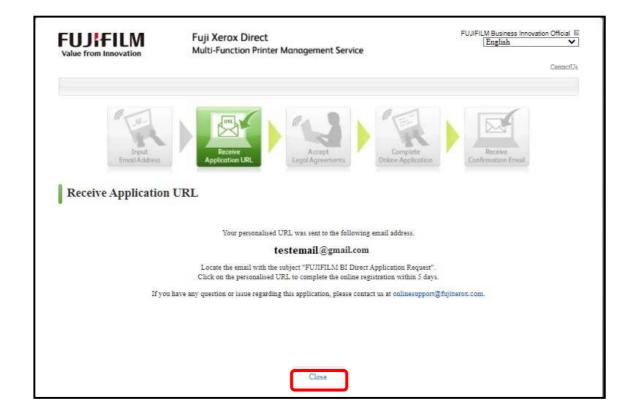

Click on the URL and you will be redirected to the following link. Proceed with the application by accepting the Legal Agreements.

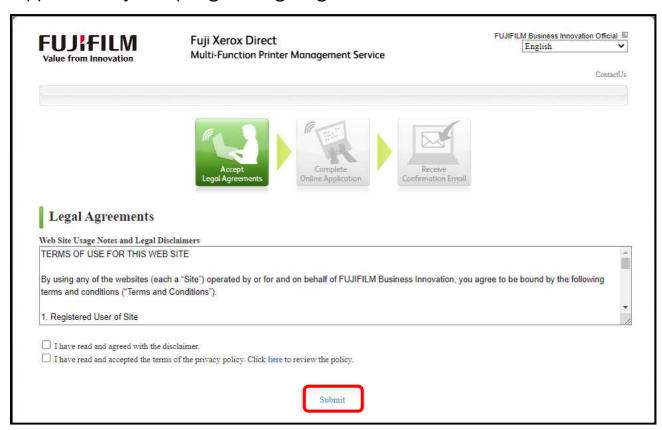

Complete the Online Application form to Continue. Your application will be processed. Thank you.

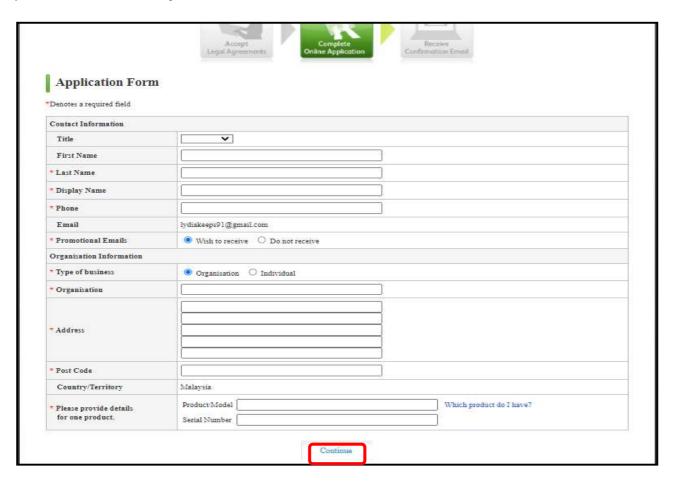

This Quick User Guide is printed on FUJIFILM Revoria Press E1136/E1125/E1110/E1100
Copyright Reserved © 2022 by Customer Training Department FUJIFILM Business Innovation Asia Pacific Pte. Ltd.
Printed in Malaysia

For Service & Supplies Enquiries (Nationwide)

Toll Free: 1-300-88-1163

Online support: fujifilm.com/fbmy

